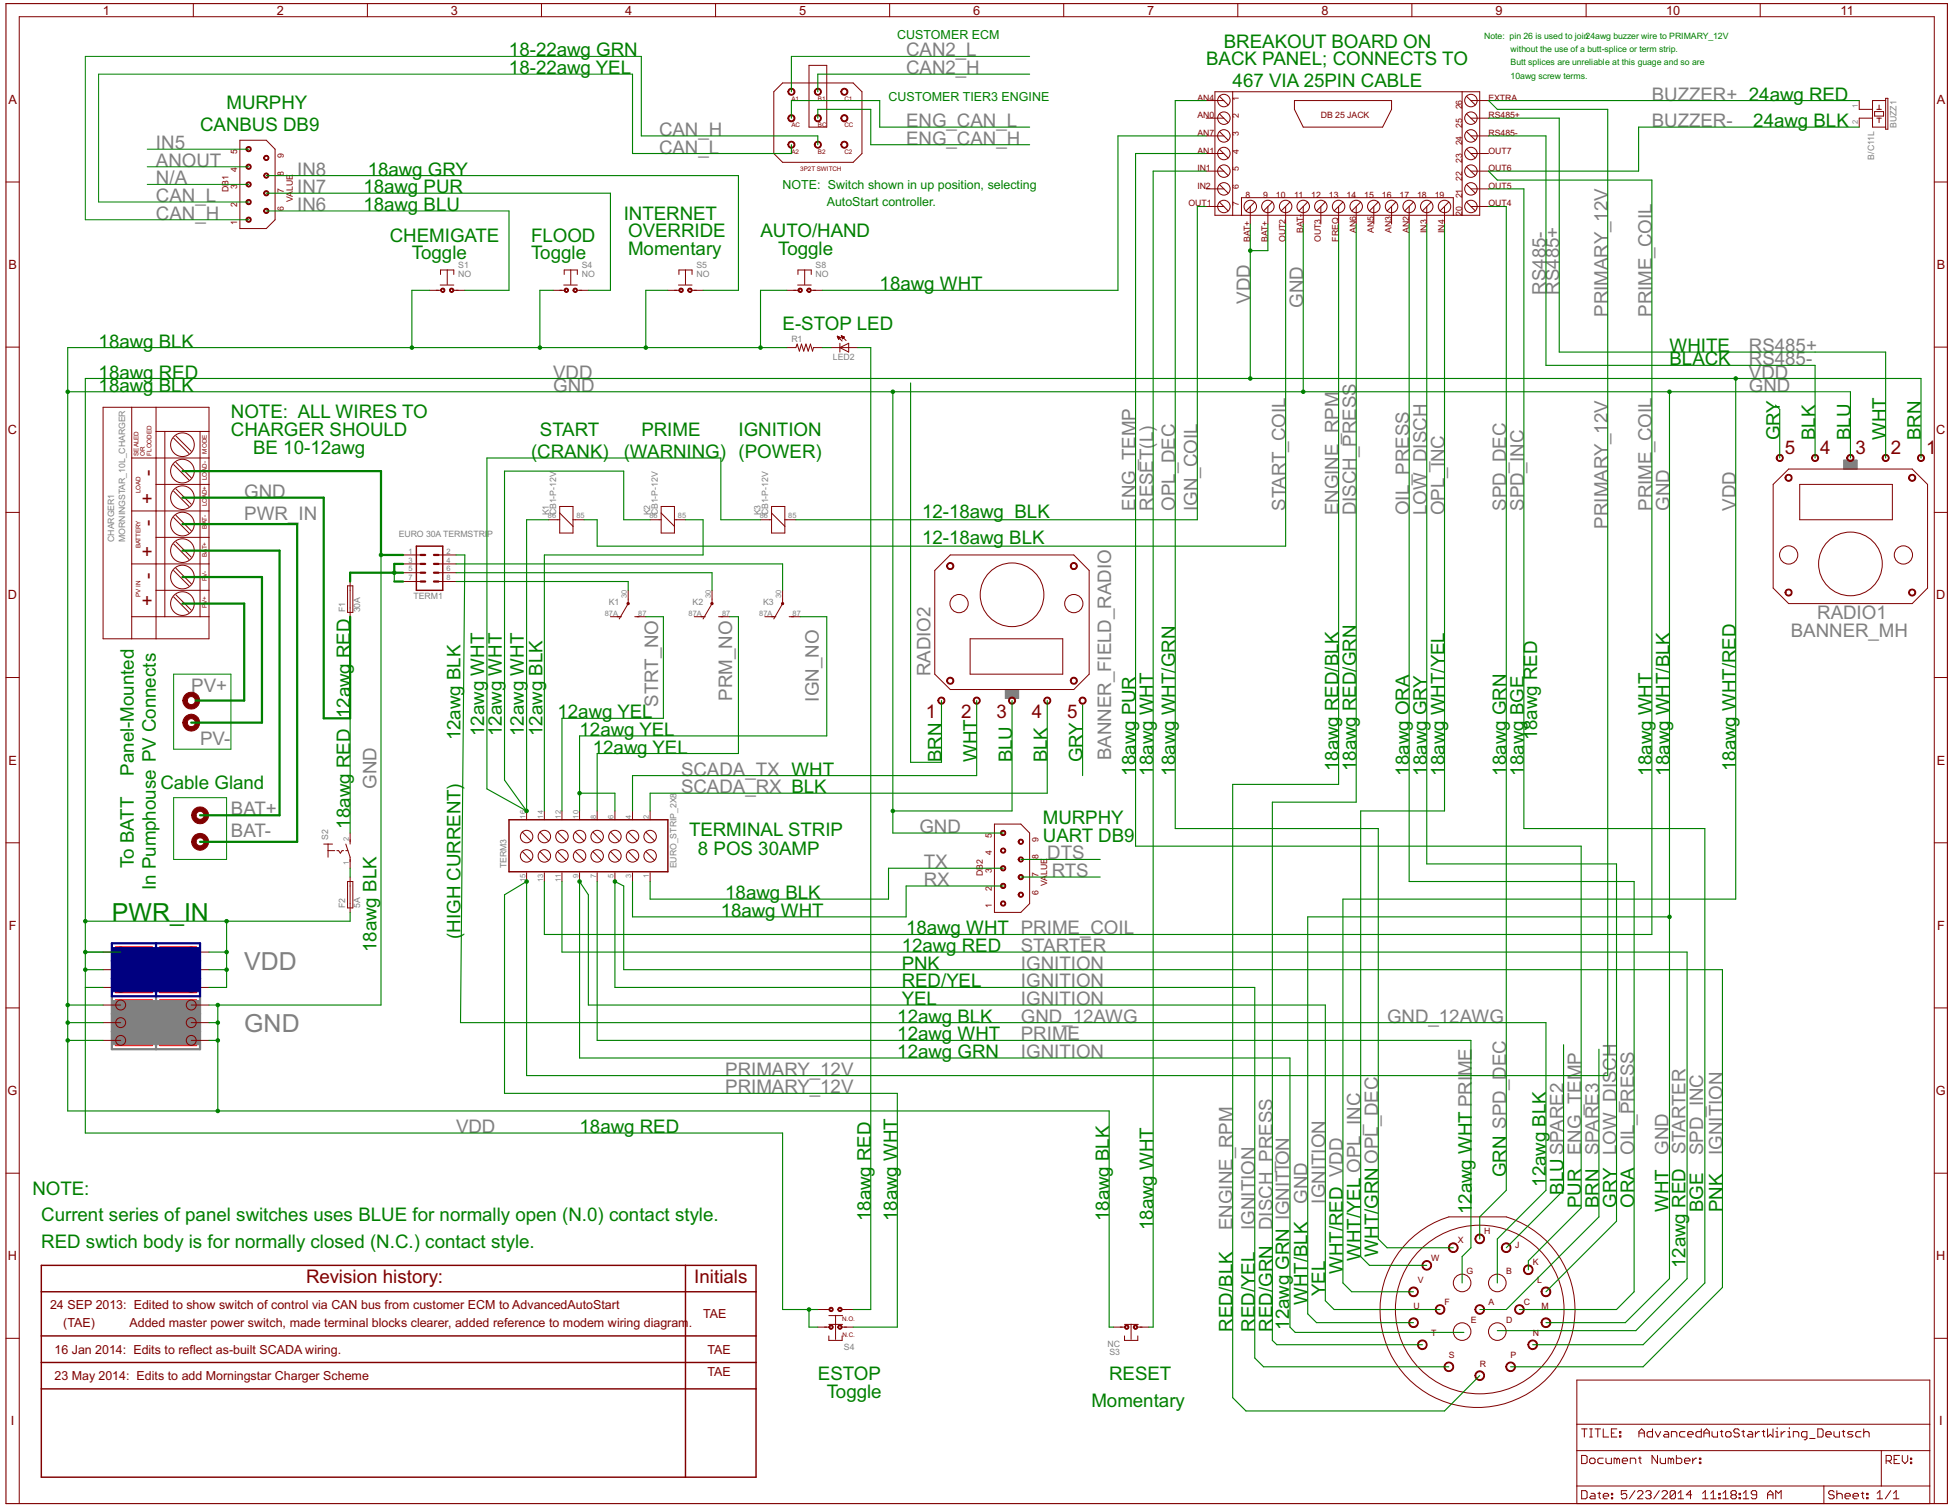

NOTE:
Current series of panel switches uses BLUE for normally open (N.0) contact style.
RED swtich body is for normally closed (N.C.) contact style.

Revision history:	Initials
24 SEP 2013: Edited to show switch of control via CAN bus from customer ECM to AdvancedAutoStart (TAE) Added master power switch, made terminal blocks clearer, added reference to modem wiring diagram.	TAE
16 Jan 2014: Edits to reflect as-built SCADA wiring.	TAE
23 May 2014: Edits to add Morningstar Charger Scheme	TAE

TITLE: AdvancedAutoStartWiring_Deutsch
Document Number: REV:
Date: 5/23/2014 11:18:19 AM Sheet: 1/1